


Basic Cold-Mount[®] Procedure

Mounting a Print to an Adhesive Coated Board



Peel release liner about 1-½” from top of coated substrate. Crease release liner.

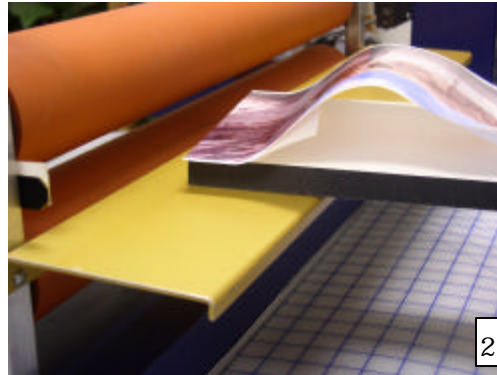

Line print up with edges of substrate. Lightly tack print along top ½” of substrate, working from the center out or from one side to the other, without trapping air. (Do NOT press along the crease in the release liner.)




Insert tacked end of print about ½” into the laminator. (Do not catch the crease in the release liner between the rollers.) As you start the laminator, hold the print at a 45 degree angle above the top roller.



Use hand tension to wrap the print around the top roller. Make sure both edges of the print are tight against the roller to avoid trapped air and wrinkling.



Peel off the release liner. Run the print and the substrate through the laminator. Be sure that the print does not flop down on the exposed adhesive.

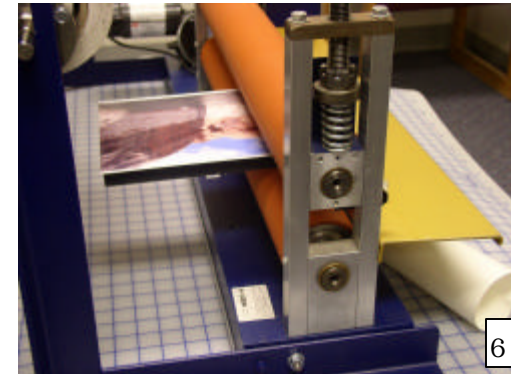

After mounting, the print can be placed face down on the cutting mat and trimmed if necessary.



Coda, Inc. • 30 Industrial Avenue • Mahwah, NJ 07430 • Phone: 201-825-7400 • Fax: 201-825-8133


sales@codamount.com www.codamount.com

Basic Cold-Mount[®] Procedure

Mounting a Print to an Adhesive Coated Board



1
Peel release liner about 1-½" from top of coated substrate. Crease release liner.

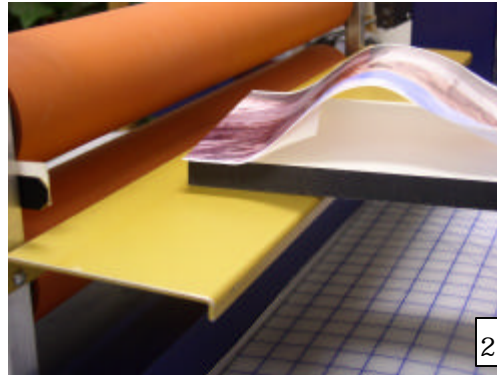

2
Line print up with edges of substrate. Lightly tack print along top ½" of substrate, working from the center out or from one side to the other, without trapping air. (Do NOT press along the crease in the release liner.)




3
Insert tacked end of print about ½" into the laminator. (Do not catch the crease in the release liner between the rollers.) As you start the laminator, hold the print at a 45 degree angle above the top roller.



4
Use hand tension to wrap the print around the top roller. Make sure both edges of the print are tight against the roller to avoid trapped air and wrinkling.



5
Peel off the release liner. Run the print and the substrate through the laminator. Be sure that the print does not flop down on the exposed adhesive.

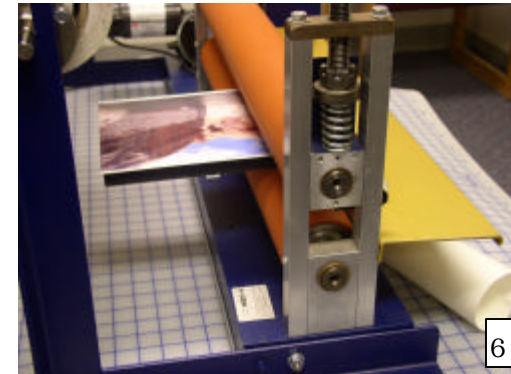

6
After mounting, the print can be placed face down on the cutting mat and trimmed if necessary.



Coda, Inc. • 30 Industrial Avenue • Mahwah, NJ 07430 • Phone: 201-825-7400 • Fax: 201-825-8133

sales@codamount.com www.codamount.com